


NARi 40CC引擎鏈鋸-配件 NR416/NR418


SPARE PARTS LIST

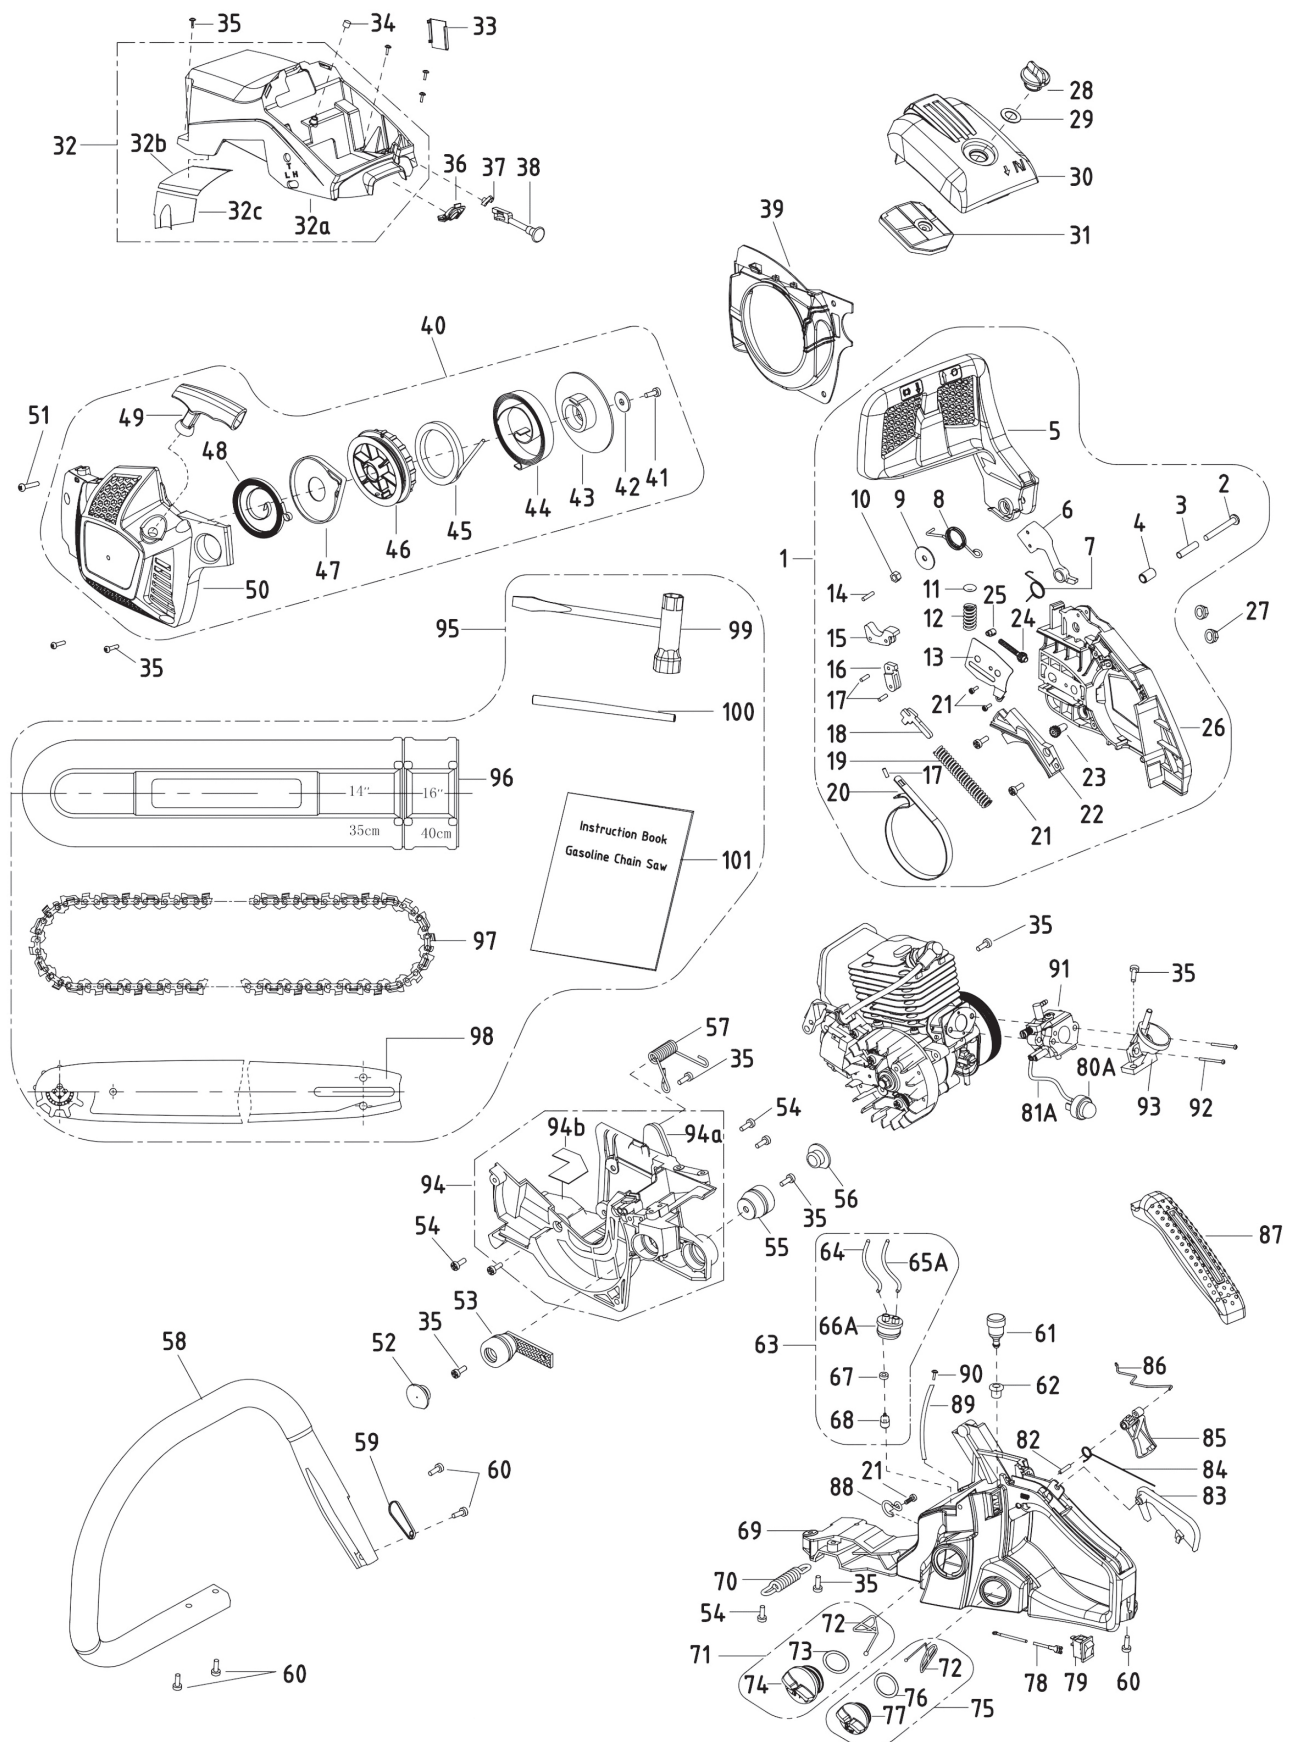

型號：NR416/NR418(40CC引擎鏈鋸-配件)

NO	零件名稱	料 號	單 價	NO	零件名稱	料 號	單 價	NO	零件名稱	料 號	單 價
1	右側蓋總成 (2-26)	NR416-B001	1000	32b	上蓋鋁隔板	NR416-B102	*	79	熄火開關	NR416-B076	90
2	螺釘M5×40	NR416-B002	*	32c	上蓋側鋁隔板	NR416-B103	*	80A	給油器	NR416-B077	100
3	擋板套管	NR416-B003	*	33	防凍塊	NR416-B030	22	81A	給油器管	NR416-B078	22
4	重錘套管	NR416-B004	*	34	減震塊	NR416-B031	12	82	銷5x24	NR416-B079	12
5	前擋板	NR416-B005	*	35	自攻螺釘 ST4.8×16	TSK40016-D18	12	83	扳機控制臂	NR416-B080	55
6	重錘	NR416-B006	*	36	防塵板	NR416-B033	40	84	扳機扭簧	NR416-B081	15
7	重錘扭簧	NR416-B007	*	37	拉杆座	NR416-B034	15	85	扳機	NR416-B082	72
8	剎車扭簧	NR416-B008	*	38	風門拉杆	NR416-B035	37	86	油門推杆	NR416-B083	100
9	墊圈 5.2×23×1.2	NR416-B009	*	39	導流罩	NR416-B036	124	87	手柄蓋	NR416-B084	77
10	自鎖螺母M5	NR416-B010	*	40	起動器總成 (41-50)	NR416-B037	700	88	出油嘴擋圈	NR416-B085	12
11	彈簧座	NR416-B011	*	51	自攻螺釘 ST4.8×19	NR416-B048	12	89	通氣管 3.5×6.5×72	NR416-B086	33
12	前擋板壓簧	NR416-B012	*	52	防塵蓋	NR416-B050	113	90	自攻螺釘 ST4.2×14	NR416-B087	12
13	出油口蓋板	NR416-B013	40	53	長減震座	NR416-B051	33	91	化油器(原廠)	NR416-B088	2000
14	銷3×14	NR416-B014	*	54	螺釘M5×14	JC520-A07	12	92	化油器螺釘	NR416-B089	36
15	主杠杠	NR416-B015	*	55	減震座	NR416-B053	55	93	進氣彎管總成	NR416-B090	515
16	副拉杆	NR416-B016	*	56	大防塵蓋	NR416-B049	70	94	鏈鋸座總成	NR416-B091	2000
17	銷3×9	NR416-B017	*	57	提把扭簧	NR416-B054	20	96	16"鏈板護套	NR416-B093	146
18	剎車控制杆	NR416-B018	*	58	提把	NR416-B055	60	96A	18"鏈板護套	NR416-B093A	167
19	剎車彈簧	NR416-B019	*	59	扭簧壓蓋	NR416-B056	20	97	16"鏈條(57目) OREGON	NR416-B094	850
20	剎車帶	NR416-B020	*	60	自攻螺釘 ST4.8×25	NR416-B057	12	97A	18"鏈條(63目) OREGON	NR416-B094A	900
21	自攻螺釘 ST4.2×9.5	NR416-B021	*	61	平衡器體總成	NR416-B058	233	98	16"鏈板 OREGON	NR416-B095	880
22	剎車彈簧蓋板	NR416-B022	*	62	平衡器座	NR416-B059	22	98A	18"鏈板 OREGON	NR416-B095A	950
23	張緊齒輪	NR416-B097	12	63	油管塞總成 (64-68)	NR416-B060	200	99	套筒板手	NR416-B096	100
24	張緊螺釘	NR416-N033	73	64	燃油管	NR416-B061	40	A	調整化油 器治具	NR416-0001	185
25	張緊塊	NR416-N032	45	65A	回油管	NR416-B062	37	B	雙頭螺柱	TSK40016-A24.1	36
26	右側蓋	NR416-B023	*	66A	膠塞	NR416-B063	*				
27	鎖緊螺母M8	TSK40016-F14	12	67	配重塊	NR416-B064	*				
28	空濾器罩螺母	NR416-B025	40	68	汽油濾體部件	NR416-B065	*				
29	鎖母墊圈 15x26x1	NR416-B026	12	69	後把底座	NR416-B066	900				
30	空濾器罩	NR416-B027	200	70	底座拉簧	NR416-B067	26				
31	空濾器	NR416-B028	155	71	汽油箱蓋總成 (72-74)	NR416-B068	55				
32	上蓋板總成	NR416-B100	*	75	機油箱蓋總成 (72.76-77)	NR416-B072	50				
32a	上蓋板	NR416-B101	318	78	接地線	NR416-B075	40				

P.S：進口料件，因匯率波動的關係，會有所變動。

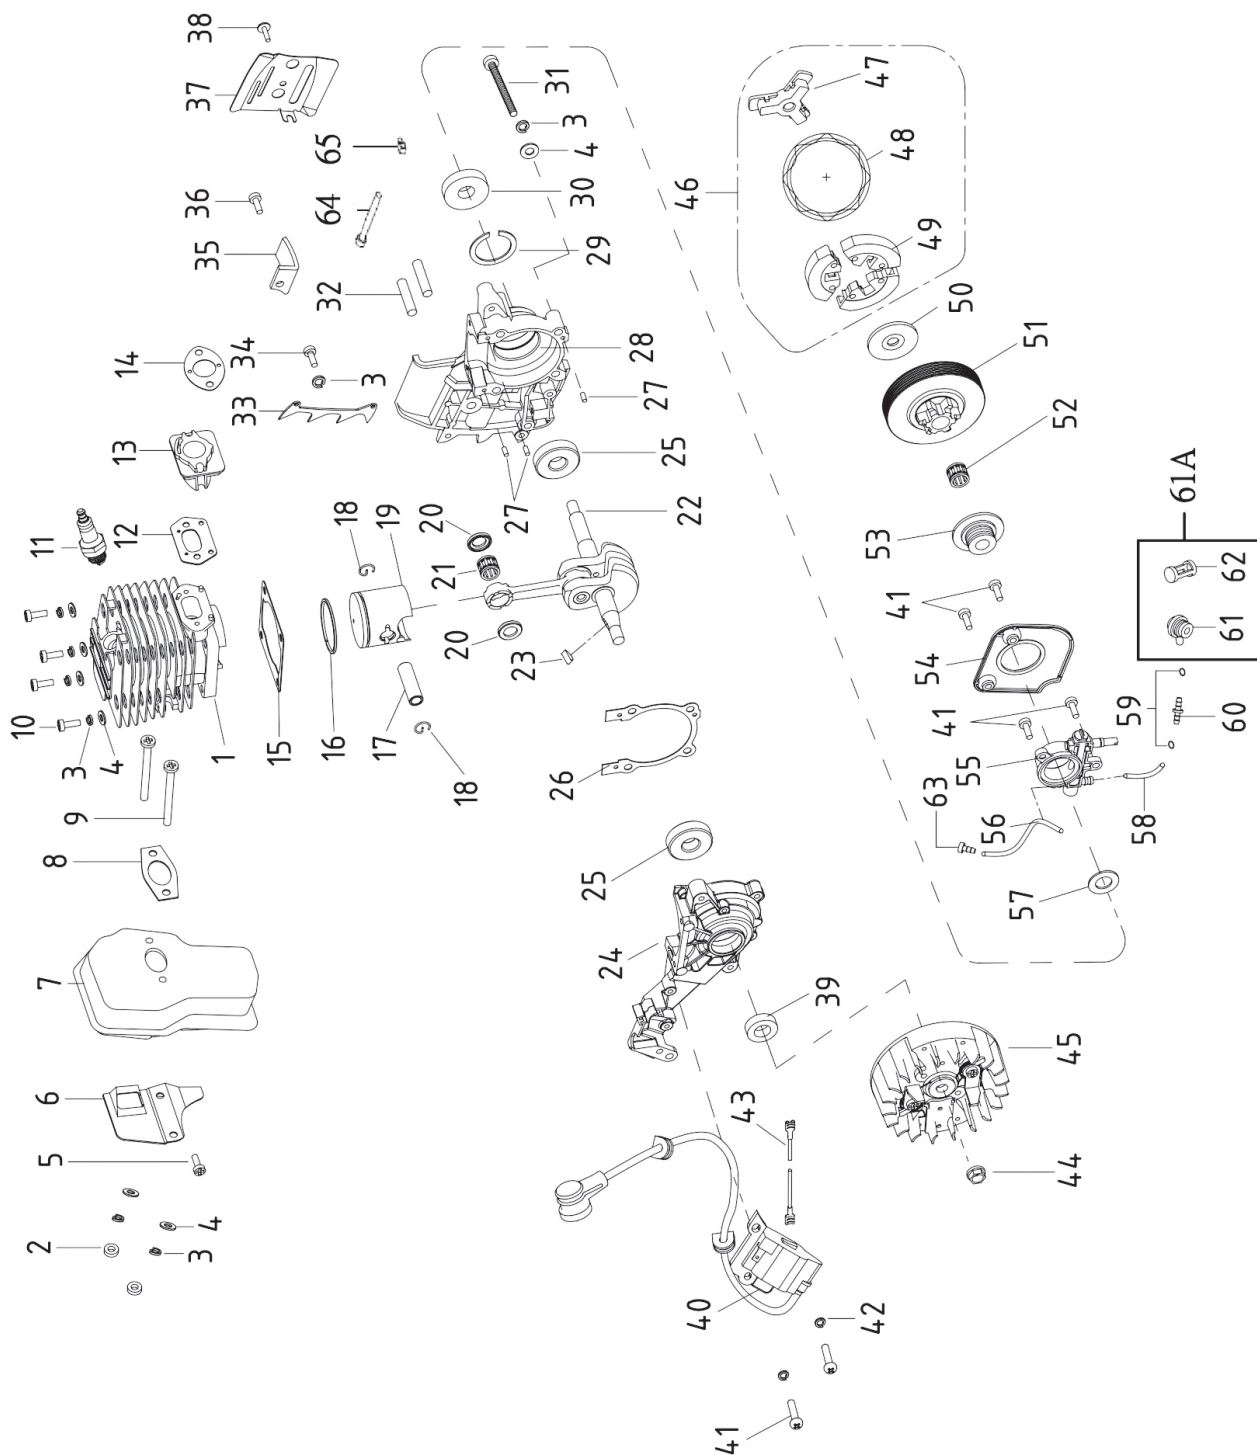

型號：NR416/NR418 (40CC引擎鏈鋸-引擎)

No	零件名稱	料號	單價
1	氣缸	NR416-N001	1500
2	螺母M5	NR416-N002	12
3	彈簧墊圈5	NR416-N003	12
4	平墊圈5	NR416-N004	12
5	螺釘M5x14	NR416-N005	12
6	消音器蓋板	NR416-N006	44
7	消音器	NR416-N007	650
8	消音器墊片	NR416-N008	22
9	消音器固定螺絲	NR416-N009	12
10	螺釘M5x20	NR416-N010	12
11	火星塞	NR416-N011	200
12	進氣管墊片	NR416-N012	22
13	進氣管	NR416-N013	200
14	化油器墊片	NR416-N014	55
15	汽缸墊片	NR416-N015	66
16	活塞環	NR416-N016	80
17	活塞銷	NR416-N017	45
18	活塞銷卡簧	NR416-N018	25
19	活塞	NR416-N019	350
20	滾針軸承擋圈	NR416-N020	12
21	滾針軸承	NR416-N021	35
22	曲軸連杆	NR416-N022	1000
23	半圈鍵3x3.5x10	NR416-N023	20
24	左箱體	NR416-N024	800
25	培林6201D	TSK40016-A16	127
26	箱體密封墊	NR416-N026	72
27	銷3×9	NR416-N025	12
28	右箱體	NR416-N027	800
29	擋圈32	NR416-N028	32
30	油封12×32×5.5	NR416-N029	130

No	零件名稱	料號	單價
31	螺釘M5×30	TSK40016-A08	12
32	螺柱M8x26-8.8	NR416-N031	14
33	擋刺	NR416-N034	80
34	螺釘M5x12	NR416-N035	12
35	擋鏈塊	NR416-N036	14
36	擋鏈塊螺釘	NR416-N037	12
37	張緊被動齒輪座壓蓋	NR416-N038	26
38	螺釘M4×10	NR416-N039	12
39	油封12×22×7	NR416-N040	120
40	點火器	NR416-N041	550
41	螺釘M4×14	NR416-N042	12
42	彈簧墊圈4	NR416-N043	12
43	熄火導線	NR416-N044	14
44	法蘭螺母M8×1	NR416-N045	33
45	飛輪總成	NR416-N046	600
46	離合器總成 (47-49)	NR416-N047	390
50	剎車碗墊圈	NR416-N051	25
51	剎車碗	NR416-N052	382
52	滾針軸承10x13x13	NR416-N053	90
53	蝸杆	NR212-B102	63
54	蓋板	NR416-N055	123
55	機油泵	NR416-N056	255
56	機油泵出油管 3x6.5x75	NR416-N057	40
57	蝸杆墊圈 10×18×1	NR416-N058	12
58	機油進油管 3×6.5×68	NR416-N059	58
59	油管卡簧	NR416-N060	12
60	進油管接頭	NR416-N061	44
61A	機油進油座總成 (61-62)	NR416-N062	98
63	機油噴油嘴	NR416-N065	22
64	螺釘組合件M5x48	NR416-N033	73
65	張緊塊	NR416-N032	45

P.S：進口料件，因匯率波動的關係，會有所變動。